

enjoy

digital chronothermostat




cewal QUICK START GUIDE | ENGLISH

Thank you for having chosen **enjoy** for the thermoregulation of your environment.

By following this quick guide, you can install it and make it operational in just a few steps.



Free the case from the base using a screwdriver on the lower clip and pulling it upwards.

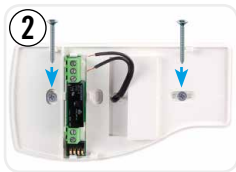

Fix the base to the wall after having passed the wires through the slot.



Fit the base back onto the base. First the top, then the bottom stop.



Release the battery compartment cover. Press the bottom stop and then release upwards.



Fit two batteries size AA LR6 carefully following the order indicated inside the compartment.



Replace the battery compartment cover by first inserting the top part and then use the lower clip.



ENJOY is now already operational!

Skip to **(V1)** for the *Quick-Start* procedure.

ENJOY is now already operational.

Manual mode:

Setpoint = 20 °C

Winter (this icon lights up if room temperature is <)

V1



In V1 you can turn and click to set a different temperature or you can either press the left button or the right one and you will be in V2 at the start of the *Quick-Start* guided procedure.


Start *Quick-Start* guide.

V2




From V2 turn and click to set the language and move to V3.

V3

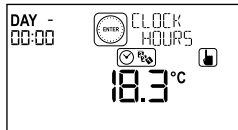

From V3 turn and click to set the hour and move to V4.

V4

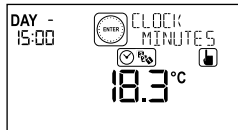

From V4 turn and click to set the minutes and move to V5.

V5




From **V5** turn and click  to set the day of the week and move to **V6**.

V6



From **V6** turn and click  to set the WINTER or SUMMER mode and move to **V7**.

V7

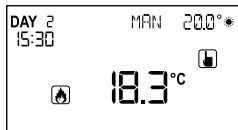

NB: the sequence is simple and self-guided step-by-step, you can, however, still exit the menu at any time.

By pressing the right key  you return to the previous step.

By pressing the left key  you return to the start mode. **V1**.


Once the *Quick-Start* sequence has been completed, ENJOY shows up in **V7** that is its standard manual operating mode where elements just set such as day, hour and minutes appear.

You can change the setpoint  in this manual operating mode, by turning and clicking .

Further information on the manual operating mode may be found in the User Manual.

Standard manual operating mode.


V7

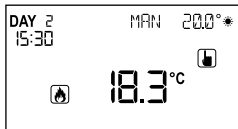

From this mode, by pressing the left key  you can change ENJOY to automatic operation (V8).

Standard automatic (programmed) operating mode.

V8

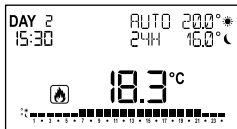

Here, you find it already operating with default parameters:

- comfort temp. °  = 20 °C
- economy temp. °  = 16 °C
- programme = P2

See User Manual under the automatic operation mode section.

Here ENJOY is ready. With the left key  you may change from automatic to manual operation at any time.


However, **from when you inserted the batteries, ENJOY is working uninterruptedly for your utmost comfort.**

To turn on and off see the User Manual under the Turning off and on section.

Now, by pressing the right key

 whether in manual operation (V7) or automatic operation (V8), you can access the programming menu

V9

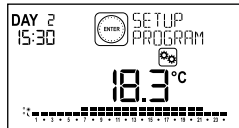

and, perhaps with the help of the User Manual, discover the countless possibilities for customization that ENJOY gives you.



cewal

CEWAL S.p.a.

Via Gramsci, 42

30010 Camponogara (VE) Italy

Tel. +39 041 462155

Fax +39 041 4174282

cewal@cewal.com

www.cewal.com