


ENJOY is now already operational.

Manual mode:

Setpoint = 20 °C

Winter (this icon lights up if room temperature is <)

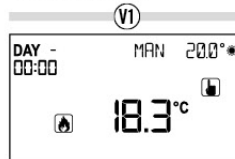


In (V1) you can turn and click to set a different temperature or you can either press the left button or the right one and you will be in (V2) at the start of the *Quick-Start* guided procedure.


Start *Quick-Start* guide.



From (V2) turn and click to set the language and move to (V3).

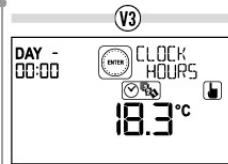

From (V3) turn and click to set the hour and move to (V4).

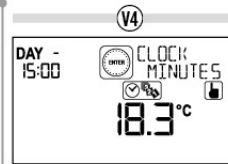

From (V4) turn and click to set the minutes and move to (V5).



cewal

CEWAL S.p.a.

Via Gramsci, 42


30010 Camponogara (VE) Italy

Tel. +39 041 462155

Fax +39 041 4174282

cewal@cewal.com

www.cewal.com

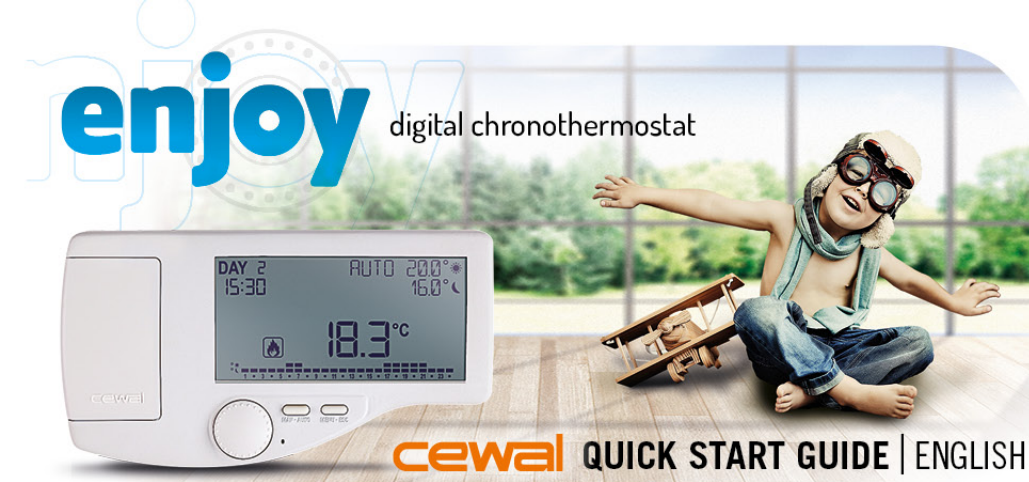


Thank you for having chosen **enjoy** for the thermoregulation of your environment.

By following this quick guide, you can install it and make it operational in just a few steps.



Free the case from the base using a screwdriver on the lower clip and pulling it upwards.

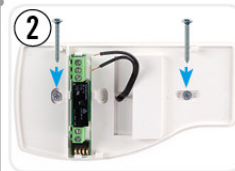

Fix the base to the wall after having passed the wires through the slot.



Fit the base back onto the base. First the top, then the bottom stop.




Release the battery compartment cover. Press the bottom stop and then release upwards.




Fit two batteries size AA LR6 carefully following the order indicated inside the compartment.



Replace the battery compartment cover by first inserting the top part and then use the lower clip.

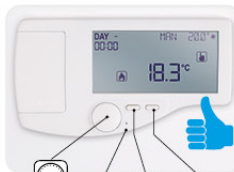


ENJOY is now already operational!
Skip to **V1** for the *Quick-Start* procedure.

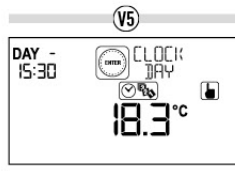

From **V5** turn and click **ENTER** to set the day of the week and move to **V6**.



From **V6** turn and click **ENTER** to set the WINTER or SUMMER mode and move to **V7**.

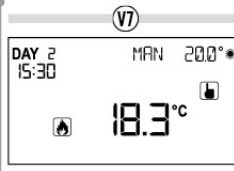

NB: the sequence is simple and self-guided step-by-step, you can, however, still exit the menu at any time.

By pressing the right key **MENU-ESC** you return to the previous step.


By pressing the left key **MAN-AUTO** you return to the start mode. **V1**.

Once the *Quick-Start* sequence has been completed, ENJOY shows up in **V7** that is its standard manual operating mode where elements just set such as day, hour and minutes appear.

You can change the setpoint in this manual operating mode, by turning and clicking **ENTER**.


Further information on the manual operating mode may be found in the User Manual.

Standard manual operating mode.

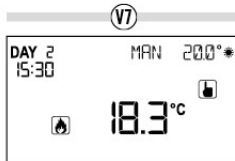

From this mode, by pressing the left key **MAN-AUTO** you can change ENJOY to automatic operation **V8**.

Standard automatic (programmed) operating mode.

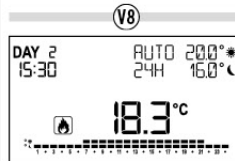


Here, you find it already operating with default parameters:
– comfort temp. = 20 °C
– economy temp. = 16 °C
– programme = **P2**

See User Manual under the automatic operation mode section.

Here ENJOY is ready. With the left key **MAN-AUTO** you may change from automatic to manual operation at any time. However, **from when you inserted the batteries, ENJOY is working uninterruptedly for your utmost comfort.**

To turn on and off see the User Manual under the Turning off and on section.

Now, by pressing the right key **MENU-ESC** whether in manual operation **V7** or automatic operation **V8**, you can access the programming menu

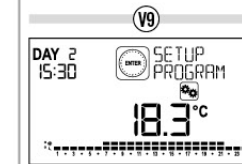

and, perhaps with the help of the User Manual, discover the countless possibilities for customization that ENJOY gives you.